User's manual

UNI MIDI Breath Controller

November 2013, Rev 1.0

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

The information in this document is subject to change without notice and does not represent a commitment on the part of TEControl. No part of this publication may be copied, reproduced or otherwise transmitted or recorded, for any purpose, without prior written permission by TEControl. All product and company names are ™ or ® trademarks of their respective owners.

© TEControl, 2013. All rights reserved.
Ragnarsv.2
23192 Trelleborg
Sweden

For general information about products: info@TEControl.se
For technical questions and enquiries: support@TEControl.se

For the most up to date information, visit the support pages at our web site
http://www.tecontrol.se
There you can find documentation and latest software.

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

1 TABLE OF CONTENT

Contents

1 Table of content 3

2 Revisions 3

3 Introduction 4

4 Overview 5

4.1 System requirements 6

5 Getting started 7

5.1 Deliverables 7

5.2 Installation 7

5.3 Default settings 8

5.4 Configuration Utility 8

5.5 How to program 10

5.6 Performance 11

5.7 Compatibility 12

6 Mouthpieces 12

7 Control change numbers 14

8 Declaration of conformity 19

2 REVISIONS

Rev.	Date	Major changes
1.0	17-November-2013	First issue

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

3 INTRODUCTION

The team at TEControl is very happy to be able to serve the community and fill the gap left by Yamaha in the world of MIDI controllers. With sample libraries getting better and better, physical modeling advancing to incredible realism, the need for good controllers is obvious.

We like to think that we took over where Yamaha left, providing the MIDI community with not only a replacement but taking it to a new level corresponding to developments made in the MIDI world during the last couple of years.

With the introduction of the UNI MIDI Breath Controller we are now able to provide you with control of both computer-based soft-synths and keyboard/synthesizers.

Furthermore, we intend to keep this business concurrent with both new developments and possibly provide back compatibility with older equipment.

To quickly get an overview of the past and present world of breath and wind controllers, we recommend checking out:

http://www.patchmanmusic.com/WindControllerFAQ.html.

It contains a very good description of Breath Controllers in general together with available solutions.

All this said, we encourage suggestions for improvements and new products.

The TEControl team

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

4 OVERVIEW

The UNI MIDI Breath Controller is a Breath-to-MIDI converter for use with any MIDI device accepting CC data though a USB port or DIN connector. It has a built-in pressure sensor as input and generates continuous MIDI data corresponding to the amount of breath pressure applied to it. The MIDI Breath Controller can be programmed to send any CC on any MIDI channel. E.g.:

- CC1 - Modulation wheel
- CC2 - Breath control
- CC7 - Volume
- CC11 - Expression

For a complete list of MIDI CC, see chapter 7.

The UNI MIDI Breath Controller can also send pitch bend and aftertouch.

Another unique feature of the UNI MIDI Breath Controller is its ability to add a variable amount of curvature to the response of the applied pressure. In other words, it allows you to shape the response from breath pressure to MIDI CC to your liking. This allows you to correct for a nonlinear response, or to add greater response at one end of the breath range compared to the other. This way you can optimize the sensitivity to your own style of playing.

The UNI MIDI Breath Controller comes pre-programmed with default factory settings i.e. CC2 (breath control) on MIDI channel 1, with linear sensitivity and maximum input/output ranges. All settings can be reprogrammed with a computer, using the Configuration Utility that can be downloaded from our website. The Configuration Utility runs on Windows or Mac computers and can store settings in the Breath Controller's non-volatile memory allowing them to be retained for standalone use with a keyboard/synthesizer.

The UNI MIDI Breath Controller sends identical MIDI data on both cables (USB and DIN) but it is powered exclusively through the USB connector and has no internal battery. This means that when using the DIN connector only (for example standalone use with a keyboard/synthesizer), the device still needs to be powered through the USB connector. Power can be supplied by e.g. a universal USB charger, which is not included in the package.

The UNI MIDI Breath Controller is delivered complete with silicone tube and standard mouthpieces. An optional headset with Yamaha BC3 style mouthpiece is available for ordering.

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

4.1 System requirements

The UNI MIDI Breath Controller does not require installation of drivers or software. It will work with the default settings straight out of the box with both Windows and Mac OS. If you need to change the settings e.g. MIDI CC, it can be done with the **Configuration Utility**.

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

5 GETTING STARTED

5.1 Deliverables

Your purchase of the **UNI MIDI Breath Controller** includes:

- UNI MIDI Breath Controller
- Silicone tube
- Standard mouthpieces
- MIDI Breath Controller Configuration Utility (download)

5.2 Installation

Cut the silicone tube to convenient length and connect it to the Breath Controller and the mouth piece of your choice.

Connect the **UNI MIDI Breath Controller** to a USB port on your computer (No software or driver installation is required) and it will show as a **Breath Controller** in your applications. Starting with firmware version 2.0, the version and serial number are also included in the device description.

Alternatively, simply connect the MIDI DIN cable to your synthesizer/keyboard, the USB cable to a universal USB charger (not supplied) and start playing.

To change the settings, download the latest version of the MIDI Breath Controller **Configuration Utility** from our website at http://www.tecontrol.se, unzip it and run the installer. Settings can only be changed from a computer, not from a keyboard/synthesizer.

For future enhancements, firmware upgrades will be available.

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

5.3 Default settings

The UNI MIDI Breath Controller comes pre-configured with default settings and will work straight-out-of-the box. The default settings are as follows:

- *Linear sensitivity*
- *Input and output ranges set to maximum*
- *MIDI channel 1*
- *CC# 2 (breath control)*

5.4 Configuration Utility

The UNI MIDI Breath Controller Configuration Utility is required for changing the settings.

Starting the configuration utility will show the following window

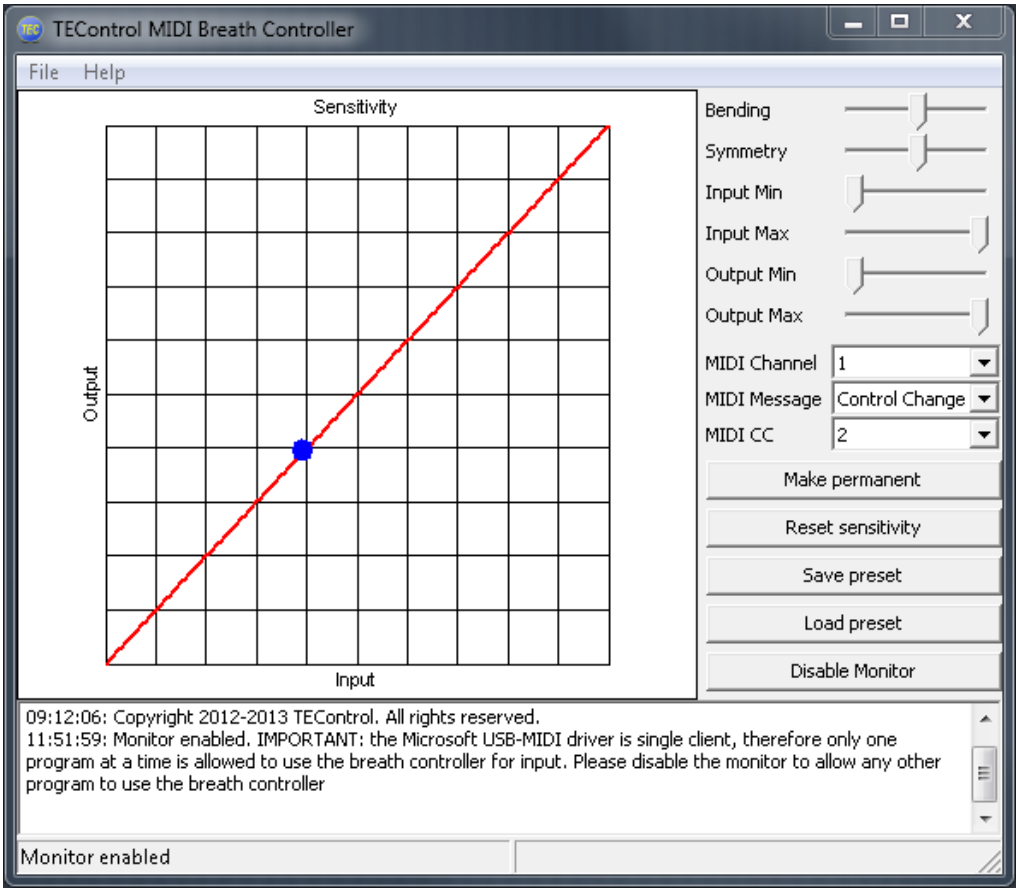

Figure 1 - Default settings

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

When started for the first time, the Configuration Utility will ask the user to choose the Breath Controller and will check connection. If not found, the lower portion of the window will display an error message "*Error - controller not detected*". The device selection dialog box can be recalled at any time from the “File->Select Controller” menu.

It has been reported to us that on some Windows installations, the operating system may report the Breath Controller as "*USB Audio Device*" instead of "*Breath Controller*". For those rare instances, just select “USB Audio Device” to select the correct device.

In your player, sequencer etc... the Breath Controller has to be selected as a MIDI input in order to work. The Breath Controller also appears in the MIDI output list but should **not** be selected since it is used by the Configuration Utility.

In your DAW, you must also configure the MIDI input of the track you are playing or recording to *"MIDI omni"* or similar. This is necessary to allow you to control the *instrument from both keyboard and Breath Controller.*

WARNING!!!

Due to the nature of the Breath Controller (or any other MIDI controller) the CC will be left at zero value when you release the pressure (stop blowing). Depending on the CC you are controlling you might not hear any sound if not blowing.

You might get into a deadlock if e.g. you first use the Breath Controller with CC 7 (volume), stop blowing will leave your instrument volume at zero value, change the CC to e.g. 11 (expression). No sound will be heard since the CC 7 - volume is still at zero.

Please, keep this in mind before contacting support.

To solve the problem either restart your sample player or try the following:

- Select the CC that might be left at zero.
- While you apply pressure change the CC to e.g. 1 (mod wheel)
- Repeat if you have more CCs left at zero

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

5.5 How to program

The 6 sliders let you tailor the response from input pressure to CC value.

With the **Bending** and **Symmetry** sliders you can change the linear response to various shapes.

The **Input Min** sets the threshold of the input pressure i.e. any pressure below the threshold will not cause any change in the output CC value.

The **Input Max** can be tailored to how hard you want to blow to achieve max CC value (set by **Output Max**).

With the **Output Min** you can set the output CC value to be used for pressures below the input threshold. This is useful if you don't want the CC value to drop to zero.

The **Output Max** sets the maximum CC value to be sent.

MIDI messages are transmitted only when input changes cause a change in the output CC value. The minimum time resolution is 10 milliseconds. This guarantees a fast response with no noticeable latency.

With the **MIDI Channel** drop-down list you set the MIDI channel to be used for the transmittal of the MIDI message.

The **MIDI CC** drop-down list lets you select the actual controller to be used e.g. CC1 - ModWheel, CC2 - Breath Control etc... See annex for a complete list. In the **MIDI Message** drop-down list you can also select **Pitch Bend** and **After Touch**. **Pitch Bend** works only for positive signal (upwards bend) and **After Touch** is what the MIDI specification refers to as channel pressure. Note that when either Pitch Bend or Aftertouch is selected, the MIDI CC drop down is disabled. Also note that Pitch Bend and Aftertouch have been introduced with firmware version 2.0. Breath Controllers running earlier firmware will ignore this setting and keep sending CC messages. If necessary the firmware can be upgraded. Contact support@tecontrol.se for details.

All the above changes to the settings take immediate effect but are lost when the computer is powered off or the Breath Controller is removed from the computer. To store you settings permanently in the Breath Controller use the **Make permanent** button. This means your settings are remembered when the Breath controller is unpowered. You can now move it to another computer or keyboard with your favorite settings intact.

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

Every time you use the **Make permanent** button the Configuration Utility stores the parameters in the Windows registry and automatically retrieves the parameters of the Breath Controller when you start the Configuration Utility.

The **Reset sensitivity** button resets the sensitivity to linear with full input and output ranges.

The **Configuration Utility** includes the possibilities to **Save** and **Load** as many presets as you like. This is very convenient since each sample library, VST instrument or keyboard synthesizer might require different settings.

The **Configuration Utility** now also includes a breath monitor, where the blue dot travelling along the sensitivity curve indicates the input pressure. The monitor is controlled by the **Enable Monitor** and **Disable Monitor**. In the MAC version you can hear the sound while you monitor the breath input. This is unfortunately not possible with the windows version due to limitations in Windows where you have to disable the Breath Controller in your sequencer.

5.6 Performance

In Figure 2 SONAR has been used to record 2 seconds of MIDI Breath Controller output. The gaps in the data occurs when the input doesn't result in a change in CC data.

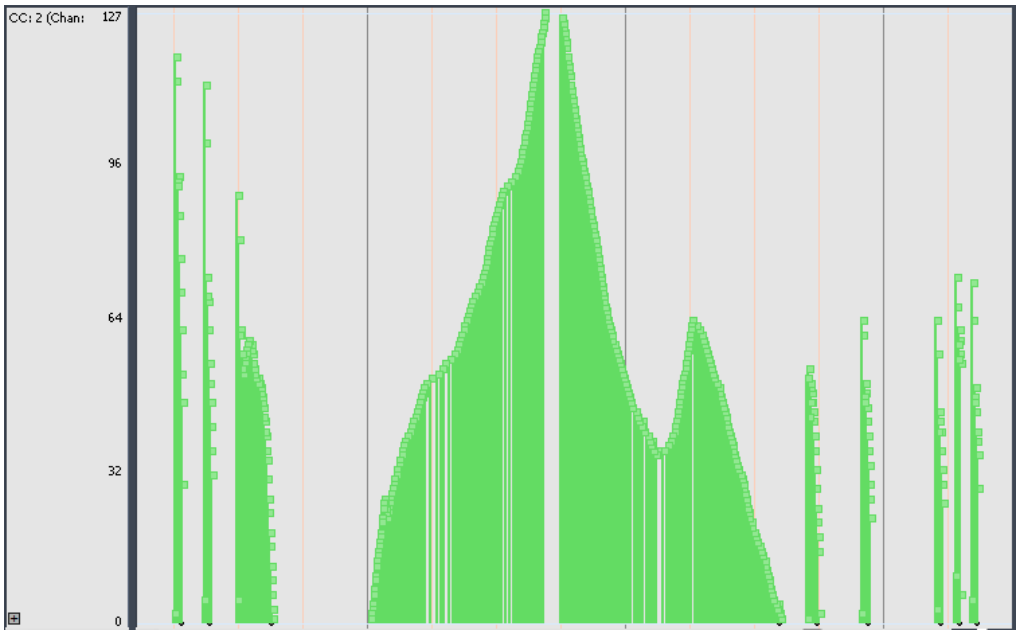

Figure 2 - CC data as recorded

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

5.7 Compatibility

Compatibility has been verified with many sample libraries. For an up to date list please refer to our website.

We have so far not found any sample player incompatible with the UNI MIDI Breath Controller. There are of course many left to be tested and although TEControl cannot guarantee compatibility there is no reason to believe the UNI MIDI Breath Controller isn't compatible with all of them assuming they all comply with the MIDI standards.

6 MOUTHPIECES

The UNI MIDI Breath Controller is delivered with two different mouthpieces and a bleed valve. This is subject to change as we continuously seek to improve the mouthpieces to find a universal, convenient and cost effective solution. We are fully aware that this does not present a solution comparable to the elegant BC3 mouthpiece but it keeps the price to an affordable level.

We are constantly looking for ways to improve and we reserve the right to make changes to the tube and mouthpieces without prior notice.

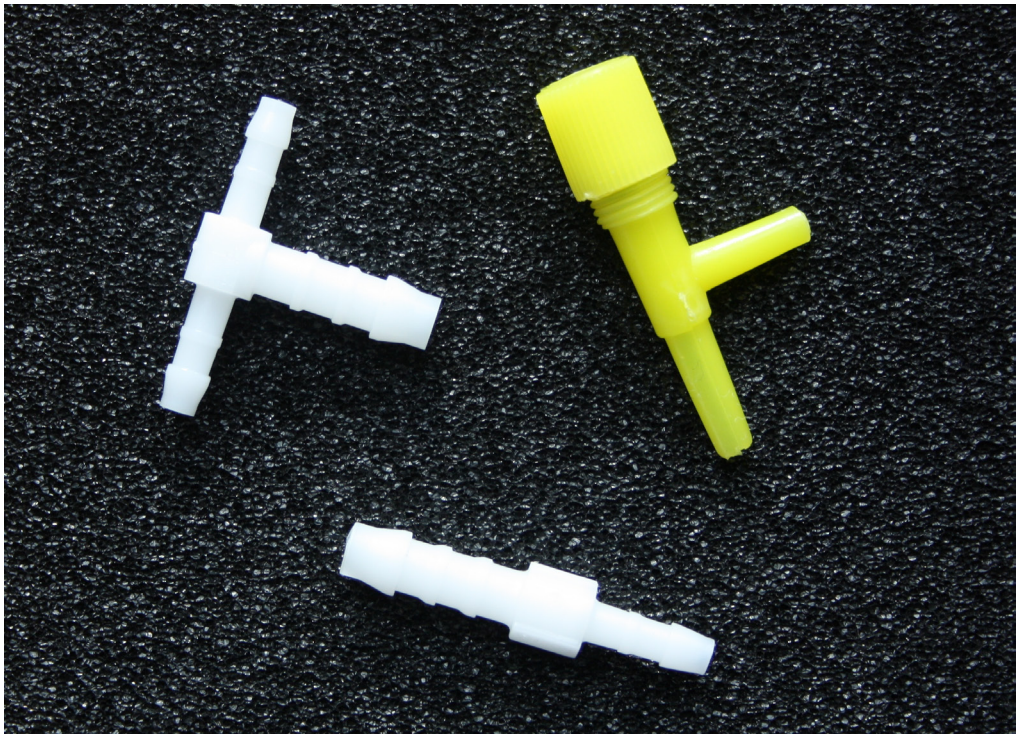

Figure 3 - Mouthpieces and bleed valve

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

The straight mouthpiece can be used for static pressure and is favored by many customers. If a flow is desired it can be achieved by bleeding the air by opening the lips a little bit.

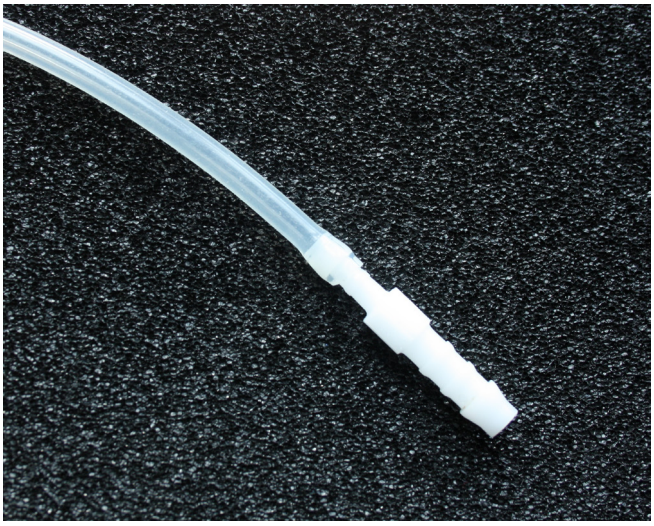

Figure 4 - Straight mouthpiece for static pressure

Woodwind and brass players mostly favors a constant flow and select the T-shaped mouthpiece. The yellow bleed valve can be adjusted to achieve the desired flow. Just cut a piece of the tube to place between the T-piece and the bleed valve. Please note that the longer the tube in between the less flow. For maximum flow use the T-piece without tube and bleed valve.

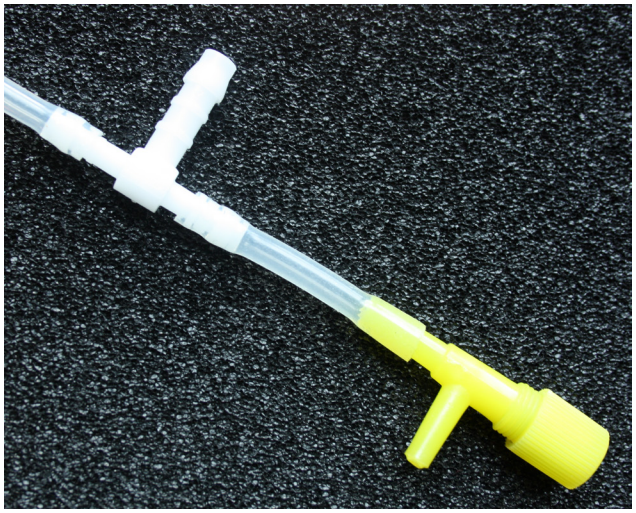

Figure 5 - T-piece with bleed valve for constant flow

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

7 CONTROL CHANGE NUMBERS

The following table lists all currently defined **Control Change** messages and **Channel Mode** messages, in control number order. (Adopted from "MIDI by the Numbers" by D. Valenti-Electronic Musician 2/88, updated by the MIDI Manufacturers Association.)

Registered Parameter Numbers (RPNs) are an extension to the Control Change message for setting additional parameters. Appended at the bottom is a table of all currently defined RPNs.

Control Changes and Mode Changes (Status Bytes 176-191)					
Control Number (2nd Byte Value)			**Control Function**	**3rd Byte Value**	
Dec	**Binary**	**Hex**		**Value**	**Used As**
0	00000000	00	Bank Select	0-127	MSB
1	00000001	01	Modulation Wheel or Lever	0-127	MSB
2	00000010	02	Breath Controller	0-127	MSB
3	00000011	03	Undefined	0-127	MSB
4	00000100	04	Foot Controller	0-127	MSB
5	00000101	05	Portamento Time	0-127	MSB
6	00000110	06	Data Entry MSB	0-127	MSB
7	00000111	07	Channel Volume (formerly Main Volume)	0-127	MSB
8	00001000	08	Balance	0-127	MSB
9	00001001	09	Undefined	0-127	MSB
10	00001010	0A	Pan	0-127	MSB
11	00001011	0B	Expression Controller	0-127	MSB
12	00001100	0C	Effect Control 1	0-127	MSB
13	00001101	0D	Effect Control 2	0-127	MSB
14	00001110	0E	Undefined	0-127	MSB
15	00001111	0F	Undefined	0-127	MSB
16	00010000	10	General Purpose Controller 1	0-127	MSB
17	00010001	11	General Purpose Controller 2	0-127	MSB

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

18	00010010	12	General Purpose Controller 3	0-127	MSB
19	00010011	13	General Purpose Controller 4	0-127	MSB
20	00010100	14	Undefined	0-127	MSB
21	00010101	15	Undefined	0-127	MSB
22	00010110	16	Undefined	0-127	MSB
23	00010111	17	Undefined	0-127	MSB
24	00011000	18	Undefined	0-127	MSB
25	00011001	19	Undefined	0-127	MSB
26	00011010	1A	Undefined	0-127	MSB
27	00011011	1B	Undefined	0-127	MSB
28	00011100	1C	Undefined	0-127	MSB
29	00011101	1D	Undefined	0-127	MSB
30	00011110	1E	Undefined	0-127	MSB
31	00011111	1F	Undefined	0-127	MSB
32	00100000	20	LSB for Control 0 (Bank Select)	0-127	LSB
33	00100001	21	LSB for Control 1 (Modulation Wheel or Lever)	0-127	LSB
34	00100010	22	LSB for Control 2 (Breath Controller)	0-127	LSB
35	00100011	23	LSB for Control 3 (Undefined)	0-127	LSB
36	00100100	24	LSB for Control 4 (Foot Controller)	0-127	LSB
37	00100101	25	LSB for Control 5 (Portamento Time)	0-127	LSB
38	00100110	26	LSB for Control 6 (Data Entry)	0-127	LSB
39	00100111	27	LSB for Control 7 (Channel Volume, formerly Main Volume)	0-127	LSB
40	00101000	28	LSB for Control 8 (Balance)	0-127	LSB
41	00101001	29	LSB for Control 9 (Undefined)	0-127	LSB
42	00101010	2A	LSB for Control 10 (Pan)	0-127	LSB
43	00101011	2B	LSB for Control 11 (Expression Controller)	0-127	LSB
44	00101100	2C	LSB for Control 12 (Effect control 1)	0-127	LSB
45	00101101	2D	LSB for Control 13 (Effect control 2)	0-127	LSB
46	00101110	2E	LSB for Control 14 (Undefined)	0-127	LSB
47	00101111	2F	LSB for Control 15 (Undefined)	0-127	LSB
48	00110000	30	LSB for Control 16 (General Purpose Controller 1)	0-127	LSB
49	00110001	31	LSB for Control 17 (General Purpose Controller 2)	0-127	LSB
50	00110010	32	LSB for Control 18 (General Purpose Controller 3)	0-127	LSB
51	00110011	33	LSB for Control 19 (General Purpose Controller 4)	0-127	LSB

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

52	00110100	34	LSB for Control 20 (Undefined)	0-127	LSB
53	00110101	35	LSB for Control 21 (Undefined)	0-127	LSB
54	00110110	36	LSB for Control 22 (Undefined)	0-127	LSB
55	00110111	37	LSB for Control 23 (Undefined)	0-127	LSB
56	00111000	38	LSB for Control 24 (Undefined)	0-127	LSB
57	00111001	39	LSB for Control 25 (Undefined)	0-127	LSB
58	00111010	3A	LSB for Control 26 (Undefined)	0-127	LSB
59	00111011	3B	LSB for Control 27 (Undefined)	0-127	LSB
60	00111100	3C	LSB for Control 28 (Undefined)	0-127	LSB
61	00111101	3D	LSB for Control 29 (Undefined)	0-127	LSB
62	00111110	3E	LSB for Control 30 (Undefined)	0-127	LSB
63	00111111	3F	LSB for Control 31 (Undefined)	0-127	LSB
64	01000000	40	Damper Pedal on/off (Sustain)	≤63 off, ≥64 on	---
65	01000001	41	Portamento On/Off	≤63 off, ≥64 on	---
66	01000010	42	Sostenuto On/Off	≤63 off, ≥64 on	---
67	01000011	43	Soft Pedal On/Off	≤63 off, ≥64 on	---
68	01000100	44	Legato Footswitch	≤63 Normal, ≥64 Legato	---
69	01000101	45	Hold 2	≤63 off, ≥64 on	---
70	01000110	46	Sound Controller 1 (default: Sound Variation)	0-127	LSB
71	01000111	47	Sound Controller 2 (default: Timbre/Harmonic Intens.)	0-127	LSB
72	01001000	48	Sound Controller 3 (default: Release Time)	0-127	LSB
73	01001001	49	Sound Controller 4 (default: Attack Time)	0-127	LSB
74	01001010	4A	Sound Controller 5 (default: Brightness)	0-127	LSB
75	01001011	4B	Sound Controller 6 (default: Decay Time - see MMA RP-021)	0-127	LSB
76	01001100	4C	Sound Controller 7 (default: Vibrato Rate - see MMA RP-021)	0-127	LSB
77	01001101	4D	Sound Controller 8 (default: Vibrato Depth - see MMA RP-021)	0-127	LSB
78	01001110	4E	Sound Controller 9 (default: Vibrato Delay - see MMA RP-021)	0-127	LSB
79	01001111	4F	Sound Controller 10 (default undefined - see MMA RP-021)	0-127	LSB

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

80	01010000	50	General Purpose Controller 5	0-127	LSB
81	01010001	51	General Purpose Controller 6	0-127	LSB
82	01010010	52	General Purpose Controller 7	0-127	LSB
83	01010011	53	General Purpose Controller 8	0-127	LSB
84	01010100	54	Portamento Control	0-127	LSB
85	01010101	55	Undefined	---	---
86	01010110	56	Undefined	---	---
87	01010111	57	Undefined	---	---
88	01011000	58	High Resolution Velocity Prefix	0-127	LSB
89	01011001	59	Undefined	---	---
90	01011010	5A	Undefined	---	---
91	01011011	5B	Effects 1 Depth (default: Reverb Send Level - see MMA RP-023) (formerly External Effects Depth)	0-127	---
92	01011100	5C	Effects 2 Depth (formerly Tremolo Depth)	0-127	---
93	01011101	5D	Effects 3 Depth (default: Chorus Send Level - see MMA RP-023) (formerly Chorus Depth)	0-127	---
94	01011110	5E	Effects 4 Depth (formerly Celeste [Detune] Depth)	0-127	---
95	01011111	5F	Effects 5 Depth (formerly Phaser Depth)	0-127	---
96	01100000	60	Data Increment (Data Entry +1) (see MMA RP-018)	N/A	---
97	01100001	61	Data Decrement (Data Entry -1) (see MMA RP-018)	N/A	---
98	01100010	62	Non-Registered Parameter Number (NRPN) - LSB	0-127	LSB
99	01100011	63	Non-Registered Parameter Number (NRPN) - MSB	0-127	MSB
100	01100100	64	Registered Parameter Number (RPN) - LSB*	0-127	LSB
101	01100101	65	Registered Parameter Number (RPN) - MSB*	0-127	MSB
102	01100110	66	Undefined	---	---
103	01100111	67	Undefined	---	---
104	01101000	68	Undefined	---	---
105	01101001	69	Undefined	---	---
106	01101010	6A	Undefined	---	---
107	01101011	6B	Undefined	---	---
108	01101100	6C	Undefined	---	---
109	01101101	6D	Undefined	---	---
110	01101110	6E	Undefined	---	---
111	01101111	6F	Undefined	---	---

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

112	01110000	70	Undefined	---	---
113	01110001	71	Undefined	---	---
114	01110010	72	Undefined	---	---
115	01110011	73	Undefined	---	---
116	01110100	74	Undefined	---	---
117	01110101	75	Undefined	---	---
118	01110110	76	Undefined	---	---
119	01110111	77	Undefined	---	---
Note:	Controller numbers 120-127 are reserved for Channel Mode Messages, which rather than controlling sound parameters, affect the channel's operating mode. (See also Table 1.)				
120	01111000	78	[Channel Mode Message] All Sound Off	0	---
121	01111001	79	[Channel Mode Message] Reset All Controllers (See MMA RP-015)	0	---
122	01111010	7A	[Channel Mode Message] Local Control On/Off	0 off, 127 on	---
123	01111011	7B	[Channel Mode Message] All Notes Off	0	---
124	01111100	7C	[Channel Mode Message] Omni Mode Off (+ all notes off)	0	---
125	01111101	7D	[Channel Mode Message] Omni Mode On (+ all notes off)	0	---
126	01111110	7E	[Channel Mode Message] Mono Mode On (+ poly off, + all notes off)	Note: This equals the number of channels, or zero if the number of channels equals the number of voices in the receiver.	---
127	01111111	7F	[Channel Mode Message] Poly Mode On (+ mono off, +all notes off)	0	---

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se

8 DECLARATION OF CONFORMITY

Declaration of Conformity

Supplier's Name: **TEControl**

Supplier's Address: **Ragnarsv. 2, 23192 Trelleborg, Sweden**

Supplier's email: info@tecontrol.se

declares that the product **UNI MIDI Breath Controller** conforms to the following

EMC:
EN 55022:2010
EN 55024:2010

RoHS:
EN 50581:2012

The product herewith complies with the requirements of the RoHS Directive 2011/65/EU, the EMC Directive 2004/108/EC and carries the CE marking accordingly.

The product herewith is exempt from the specific technical standards and other requirements contained in Part 15 of the FCC rules, according to FCC 15.103(g).

Trelleborg, 17.11.2013

Owner, TEControl

For more information on any of our products or services please visit us on the Web at:

www.TEControl.se